

DMC-600SE USE IR Remote Codes

All codes - to Philips RC-5 standard

Key Printing	Function	System	Command	Notes
OPEN/CLOSE	TRAY OPEN / CLOSE	0x04	0x2D	
POWER	POWER ON / OFF	0x04	0x0C	
STOP	STOP	0x04	0x1F	
PLAY	PLAY AND PAUSE	0x04	0x2A	
MUTE	MUTE	0x04	0x36	
SRC	UPSAMPLING	0x04	0x21	
BRIGHT	BRIGHT	0x04	0x29	
RANDOM	RANDOM PLAY	0x04	0x22	
PREVIOUS	PREVIOUS	0x04	0x11	
NEXT	NEXT	0x04	0x10	
REW	REVERSE	0x04	0x27	
FF	FORWARD	0x04	0x26	
1	NUMBER KEY PAD 1	0x04	0x0E	
2	NUMBER KEY PAD 2	0x04	0x0B	
3	NUMBER KEY PAD 3	0x04	0x1E	
4	NUMBER KEY PAD 4	0x04	0x01	
5	NUMBER KEY PAD 5	0x04	0x02	
6	NUMBER KEY PAD 6	0x04	0x03	
7	NUMBER KEY PAD 7	0x04	0x04	
8	NUMBER KEY PAD 8	0x04	0x05	
9	NUMBER KEY PAD 9	0x04	0x06	
+10	NUMBER KEY PAD +10	0x04	0x07	
REPEAT	REPEAT	0x04	0x3E	
DELETE	DELETE	0x04	0x0F	
PROGRAM	PROGRAM	0x04	0x0A	
TIME	TIME	0x04	0x3C	
VOLUME -	VOLUME DOWN	0x04	0x25	
VOLUME +	VOLUME UP	0x04	0x20	
CLOCK IN	WORD CLOCK IN	0x04	0x30	
OPTICAL	OPTICAL INPUT	0x04	0x37	
CD	CD INPUT	0x04	0x1B	
USB	PC-USB INPUT	0x04	0x39	
COAXIAL 1	COAXIAL 1 INPUT	0x04	0x3A	
COAXIAL 2	COAXIAL 2 INPUT	0x04	0x3B	
AES/EBU	AES/EBU INPUT	0x04	0x32	
BLUETOOTH	BLUETOOTH INPUT	0x04	0x3F	
TUBE	TUBE OUTPUT	0x04	0x2E	
AMPLIFIER USE ONLY				
POWER	POWER ON/OFF	0x04	0x24	
MUTE	MUTE	0x04	0x1D	
MODE 1	MODE 1	0x04	0x2F	
MODE 2	MODE 2	0x04	0x1C	
- INPUT	INPUT SELECTOR DOWN	0x04	0x31	
INPUT +	INPUT SELECTOR UP	0x04	0x33	
< BALANCE	BALANCE LEFT	0x04	0x3D	
BALANCE >	BALANCE RIGHT	0x04	0x38	
- VOLUME	VOLUME DOWN	0x04	0x0D	
VOLUME +	VOLUME UP	0x04	0x2C	