

CARY SI-300.2d IR Remote Codes

July, 01, 2016

All codes - to Philips RC-5 standard

Key Printing	Function	System	Command	Notes
POWER	POWER ON / OFF	0x16	0x0C	
UP	NAVIGATION UP	0x16	0x35	
DOWN	NAVIGATION DOWN	0x16	0x36	
LIFT	NAVIGATION LIFT	0x16	0x1F	
RIGHT	NAVIGATION RIGHT	0x16	0x2A	
ENTER	ENTER	0x16	0x21	
MENU	MENU	0x16	0x28	
DISPLAY	DISPLAY	0x16	0x29	
MUTE	MUTE	0x16	0x2D	
- VOLUME	VOLUME DOWN	0x16	0x11	
VOLUME +	VOLUME UP	0x16	0x10	
1	NUMBER KEY PAD 1	0x16	0x0E	
2	NUMBER KEY PAD 2	0x16	0x0B	
3	NUMBER KEY PAD 3	0x16	0x1E	
4	NUMBER KEY PAD 4	0x16	0x3E	
5	NUMBER KEY PAD 5	0x16	0x01	
6	NUMBER KEY PAD 6	0x16	0x02	
7	NUMBER KEY PAD 7	0x16	0x03	
8	NUMBER KEY PAD 8	0x16	0x0F	
9	NUMBER KEY PAD 9	0x16	0x04	
0	NUMBER KEY PAD 0	0x16	0x05	
*.-/	NUMBER KEY PAD *.-/	0x16	0x06	
MODE	SET GAIN MODE	0x16	0x0A	
L BALANCE	L BALANCE	0x16	0x07	
BALANCE R	BALANCE R	0x16	0x3C	
LINE 1	LINE 1 INPUT	0x16	0x24	
LINE 2	LINE 2 INPUT	0x16	0x1D	
LINE 3	LINE 3 INPUT	0x16	0x31	
LINE 4	LINE 4 INPUT	0x16	0x33	
OPTICAL	OPTICAL INPUT	0x16	0x3D	
COAXIAL 1	COAXIAL 1 INPUT	0x16	0x38	
COAXIAL 2	COAXIAL 2 INPUT	0x16	0x14	
BLUETOOTH	BLUETOOTH INPUT	0x16	0x15	
USB	USB INPUT	0x16	0x16	
AES/EBU	AES/EBU INPUT	0x16	0x17	
CLOCK IN	CLOCK IN INPUT	0x16	0x18	
CINEMA BYPASS	CINEMA BYPASS MODE	0x16	0x19	
SRC	SRC	0x16	0x3B	
BRIGHT	BRIGHT LEVEL FOR TUBE	0x16	0x1A	