

CARY AUDIO DMS-500 Quick Tips



Insert a SD Card, USB stick or USB HDD for direct playback of music with no network or computer connections. NOTE: If SD Card is formatted in exFAT, this could cause an issue, but not always. To be sure, formatting the SD Card to NTFS, FAT or FAT32 is a safer bet. DSM-500 can accommodate up to 32 GB on standard SD and up to 2 TB on SDXC and up to 3TB on USB drives. Also, if the UBS Stick was used on a Mac computer just prior to inserting in to DMS-500, this can cause an issue. To fix that, plug the USB stick into a PC, erase all content (including any hidden files), then copy your music from a PC.

For connecting to a home network router in order to stream music from Internet and network computers or NAS Drives. Use either wired (Ethernet) Or wireless (Wi-Fi). NOTE: Cannot setup Wi-Fi From app(s) first unless Ethernet is connected.



Analog outputs to preamplifier (Set output volume to +8.0). If connecting directly to amplifier and using DMS-500 as preamplifier, be sure to set volume to **MASTER** in menu and set volume low and gradually turn it up.

For USB stick or USB HDD (not computer) for direct playback of music with no network or computer connections. Same as front USB. Supports up to 3TB.