

DMS IR Remote Codes

All codes - to Philips RC-5 standard

Key Printing	Function	System Code A	System Code B	Key Command	Notes
POWER	POWER ON / OFF	0x10	0x09	0x0C	
UP	NAVIGATION UP	0x10	0x09	0x35	
DOWN	NAVIGATION DOWN	0x10	0x09	0x36	
LIFT	NAVIGATION LIFT	0x10	0x09	0x1F	
RIGHT	NAVIGATION RIGHT	0x10	0x09	0x2A	
ENTER	ENTER	0x10	0x09	0x21	
MENU	MENU	0x10	0x09	0x28	
BRIGHT	BRIGHT	0x10	0x09	0x29	
MUTE	MUTE	0x10	0x09	0x2D	
- VOLUME	VOLUME DOWN	0x10	0x09	0x11	
VOLUME +	VOLUME UP	0x10	0x09	0x10	
1	NUMBER KEY PAD 1	0x10	0x09	0x0E	
2	NUMBER KEY PAD 2	0x10	0x09	0x0B	
3	NUMBER KEY PAD 3	0x10	0x09	0x1E	
4	NUMBER KEY PAD 4	0x10	0x09	0x3E	
5	NUMBER KEY PAD 5	0x10	0x09	0x01	
6	NUMBER KEY PAD 6	0x10	0x09	0x02	
7	NUMBER KEY PAD 7	0x10	0x09	0x03	
8	NUMBER KEY PAD 8	0x10	0x09	0x0F	
9	NUMBER KEY PAD 9	0x10	0x09	0x04	
0	NUMBER KEY PAD 0	0x10	0x09	0x05	
*./	NUMBER KEY PAD *./	0x10	0x09	0x06	
PLAY MODE	PLAY MODE	0x10	0x09	0x0A	
DELETE	DELETE	0x10	0x09	0x07	
ADD	ADD	0x10	0x09	0x3C	
WXYZ	WXYZ	0x10	0x09	0x24	
OPTICAL	OPTICAL INPUT	0x10	0x09	0x3D	
COAXIAL 1	COAXIAL 1 INPUT	0x10	0x09	0x38	
COAXIAL 2	COAXIAL 2 INPUT	0x10	0x09	0x14	
BLUETOOTH	BLUETOOTH INPUT	0x10	0x09	0x15	
USB / SD CARD	USB/ SD CARD INPUT	0x10	0x09	0x16	
AES/EBU	AES/EBU INPUT	0x10	0x09	0x17	
SRC	SRC	0x10	0x09	0x3B	
HOME	HOME	0x10	0x09	0x1A	
QUEUE	QUEUE	0x10	0x09	0x33	
INTERNET	INTERNET INPUT	0x10	0x09	0x13	
NETWORK	NETWORD INPUT	0x10	0x09	0x22	
NOW PLAYING	NOW PLAYING	0x10	0x09	0x23	