DMS-650/700/800 QUICK START GUIDE

First decide how you want to connect the DMS to your Router. **Choose either Wi-Fi (two methods) or Ethernet, but DO NOT connect both ways.** <u>Delete all previous Cary streaming apps from your phone/tablet</u>. <u>Download the Cary</u> <u>Audio Streamer 2.0 app</u>, but do not have it opened. Additionally, it must be completely closed out and not running in the background.

IF YOU ARE CONNECTING THE DMS WITH WI-FI, DO NOT CONNECT AN ETHERNET CABLE.

WI-FI SETUP

- 1. Screw the two Wi-Fi and Bluetooth antennas onto the rear of the DMS.
- 2. Place the DMS in its location and connect either the XLR or RCA outputs to your preamp, integrated amp, or amplifier.
- 3. Connect the AC power cord and plug it into the AC outlet.
- 4. Wait 30 seconds and turn on the DMS. Allow it to fully boot up.

METHOD A – Wi-Fi setup using Cary Streamer 2.0 App.

WI-FI1		иятоотя	\supset	WI-PI	
OPTICAL DIGITAL INFUTS	COAXIAL 1	COAXIAL 2	ABS/BBC	SYSTEM C TRIOGER INPUT	IR INPUT
DIGITAL OUTPUTS OPTICAL	COAXIAL	USB 2	USB 3		UPDATE ONLY USB

1. Use the **IR handheld remote** to select "**Connect to Wi-Fi with App**" or wait 30 seconds for the DMS Hotspot to automatically open. If this screen does not appear, press Network input on the IR remote.

NETWORK INP			NETWORK INP	UT	
	Did not detect Ethernet connection. Do you want to connect Wi-Fi?			DMS hotspot is opened.	
No netwo	Connect to Wi-Fi with IR remote	hare a Server	No netwo Please b	SSID:DMS-WiFi Password:12345678	
connect	Connect to Wi-Fi with App	poired network	connect	Please connect to AP: "DMS-	esired network
	Don't prompt me again.	ind press Enter.		wifi" in your phone.	ind press Enter.
	After 21 s, hotspot will open.				

- 2. Open your phone/tablet WIFI setup Menu and connect to DMS WiFi hotspot.
- Once phone/tablet is connected to DMS WiFi hotspot, go back to the Cary Audio Streamer 2.0 app and follow the prompts to setup a new DMS. BE SURE TO ALLOW LOCATION SERVICES AND FILE ACCESS WHEN APP PROMPTS.
- 4. Once the DMS has successfully connected to your home Wi-Fi network, make sure your phone is also set back to your home Wi-Fi network, and not DMS Wi-Fi.

METHOD B – WiFi setup using IR remote control.

- 1. Using IR remote control, select "Connect to Wi-Fi with IR Remote." (If this screen does not appear, press Network input on the IR remote).
- 2. A prompt will appear confirming you wish to search and setup a Wi-Fi Connection. Select YES.



	SETTINGS MENU	
Volume Mode	Status: CONNECTED	
Output Voltage IR Control Network Bluetooth Send	The DMS-700 did n detect an Ethernet connection. Do you want to setup a Wi- connection?	t t 55.255.0 Fi 8.77.1 ∵92:e2
Startup	NO YES	
Firmware MQA Decoder	CONNECT RE	ESET HOTSPOT

- 3. Select your Wi-Fi network and press Enter.
- 4. Using the alphanumeric keys on the hand-held IR remote, enter your Security Key, and select Connect.

	SETTINGS MEN	U		
Network	Available Wi-Fi Net	works		N
Bluetooth Se	n Fios-CX5h8			E
User Tips	Fios-CX5h8			L
Startup	BCT 43787			9
Firmware	BCT 43787-5			F
MOA Decode	_r XFINITY			IN
Roon Ready	DIRECT-81-HP Office	eJet Pro		F
Sleen Time	BACK			S
PC Share	CONNECT	RESET	HOTSPOT	F

	SETTING	SIVIEINU		
Network	>> Status: NO		DN Wi-Ei	
Bluetooth Send				
User Tips	Enter Security Key			
Startup	tartup			
Firmware	show password			
MQA Decoder	BACK	CONNEC	CT	
Roon Ready				
Sleep Time	CONINEC	т рго	-	LIOTODOT
PC Share	CONNEC	I RES		HUISPUI

WIRED SETUP (ETHERNET)

IF YOU ARE CONNECTING THE DMS WITH WIRED ETHERNET, DO NOT CONNECT THE TWO WI-FI ANTENNAS.

- 1. Place the DMS within a cable run of your router.
- 2. *Connect* an **Ethernet cable** to the back of the DMS and *plug the other end into your router (or Network/Ethernet Switch).*
- 3. Connect the AC power cord and plug it into the AC outlet.
- 4. Wait 30 seconds and turn on the DMS. Allow it to fully boot up.

Note: If connection is not automatically established, *Press* **Menu** on the IR remote and *navigate to Network Settings* and *select* **Wired** and **DHCP** (for automatic configuration) and *press* **Connect**.

Once the DMS has established a network connection, it will default to the USB input. The DMS is now ready to enjoy. Just select whichever input source you wish to listen to i.e.; Network Servers/PCs, Internet Music Services, USB & SD Card.

NOTE: The DMS default volume is set to -30. If connected directly to an





amplifier, slowly increase volume to an acceptable level. If connected to a preamplifier, integrated amplifier, or receiver (something with a volume control), set the DMS volume anywhere from 0.0 to +8.0 and leave it. However, it is recommended to set it to +8.0 for **Pure Audio Mode** (assuming your input component can handle a 3.0 volt input) for best sound quality. Subsequent volume control should be done by the preamplifier, integrated amplifier, or receiver.

To get the most out of your DMS it is **HIGHLY recommended** to download the full manual at <u>www.caryaudio.com</u>. Without doing so, you will not fully understand all the settings and operational procedures which could lead to misuse and potential damage to other components as it relates to volume and voltage output control.

Enjoy,

The Cary Audio Team